

MEDIA-NAV

Contents

User precautions	GB.3
general information	GB.4
General description	GB.4
Introduction to the controls.	GB.7
Switch on/off.	GB.9
Operate and use	GB.10
Volume	GB.12
Radio / AUX.	GB.13
Listen to the radio.	GB.13
Auxiliary audio sources	GB.16
Audio setting	GB.19
Navigation	GB.20
The navigation system	GB.20
Reading a map.	GB.21
Enter a destination	GB.24
Guidance	GB.30
map settings.	GB.35
Managing the favourites.	GB.36
Navigation settings.	GB.38
Eco ² driving	GB.42
Bluetooth device	GB.43

Pairing/unpairing Bluetooth® devices	GB.43
Connecting/disconnecting Bluetooth® devices	GB.45
Phonebook	GB.46
Making a call	GB.47
Receiving/during a call	GB.48
Reversing camera	GB.49
System settings	GB.50
Updating the system	GB.52
Operating faults	GB.56

All rights including rights vested in the software, content and other materials installed and running in the car as well as displayed trademarks and logos, are reserved by their respective owners.

PRECAUTIONS DURING USE

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. You must always comply with the laws of the country in which you are travelling.



Precautions when operating the system

- Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

Precautions regarding navigation

- Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.
- Depending on the geographical area, the map may not have the latest information on new roads. Be alert. In all cases, Road Traffic Regulations and road signs always take precedence over the directions of the navigation system.

Precautions concerning the equipment

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not insert foreign bodies into the player.

Precautions when using the phone

- There are laws which govern the use of phones in vehicles. They do not necessarily authorise the use of hands-free phone systems under all driving conditions: drivers must be in control of their vehicles at all times;
- Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).

The description of the models given in this manual is based on the specifications at the time of writing. This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where it is sold. This manual may also contain information about functions to be introduced later in the year.

GENERAL DESCRIPTION (1/3)

Introduction

Your vehicle's multimedia system performs the following functions:

- RDS radio;
- management of auxiliary audio sources;
- hands-free phone;
- navigation assistance;
- parking distance control (reversing camera).

Radio functions

The multimedia system can be used to listen to FM (frequency modulation), and AM (amplitude modulation) radio stations.

The RDS system makes it possible to display the name of some stations and also for information messages sent by FM stations to be heard automatically:

- traffic bulletins;
- news bulletins;
- emergency messages.

Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways of connecting your personal stereo, depending on the type of device you have:

- 3.5 mm Jack socket;
- audio multi-connection unit (USB);
- Bluetooth® connection.

For more information on compatible devices, contact your approved manufacturer's dealer or visit the manufacturer's website, where available.

GENERAL DESCRIPTION (2/3)

Hands-free phone function

The hands-free Bluetooth® phone system makes the following functions possible without having to handle your phone:

- send/receive/suspend a call;
- transfer the list of contacts from the phone memory;
- access the call logs for calls which have come through the system;
- dial emergency numbers.

Telephone compatibility

Some phones are not compatible with the hands-free system, and do not enable you to use all of the available functions or do not provide the best possible sound quality.

For more information on compatible telephones, contact your approved manufacturer's dealer or visit the manufacturer's website, where available.

Navigation assistance function

The navigation system automatically calculates the geographical position of the vehicle by receiving GPS signals.


It suggests a route to your chosen destination using its road map.

Finally, it indicates the route to take, step by step, using the display screen and voice messages.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

GENERAL DESCRIPTION (3/3)

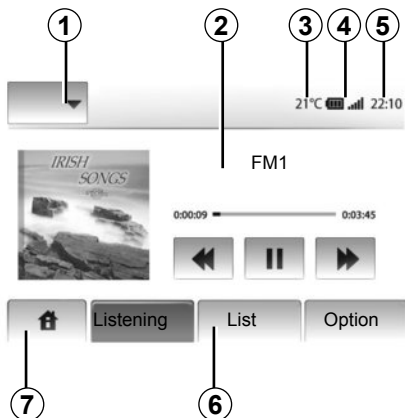

Displays

Menu screen


1 Mode selection area:

- showing the selected mode;
- when mode area is touched, rest of the area will be showing mode list.

2 Contents area.

showing the contents of menu item and information.

3 Exterior temperature (depending on the vehicle).

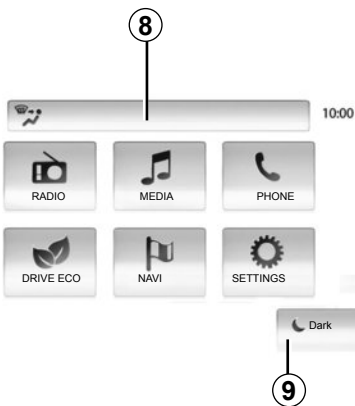

4 Telephone information area:

- if the Bluetooth system is activated, the reception and battery level of the connected device will be displayed.


5 Time area.

6 Menu area:

- display subordinate menu of mode;
- showing current menu as highlighted color.

7 Home area

Home or Back button: goes back to the home menu or previous screen.

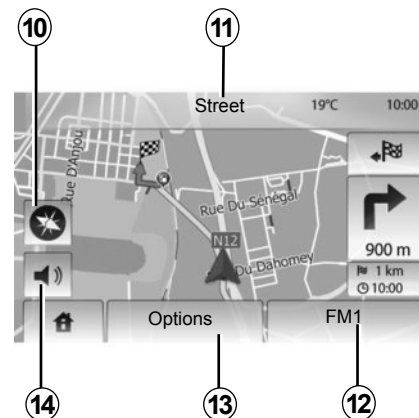

8 Air conditioning information.

9 Display standby or access to sub-menus.

Navigation screen

10 Map mode (2D/3D).

11 Name of the next street.





12 Current audio information.

13 Options for route and map setting.

14 Voice guidance On/Off.

INTRODUCTION TO THE CONTROLS (1/2)

Screen selections are made by touching the desired selection on the screen.

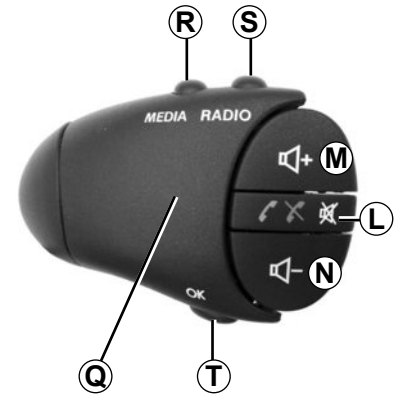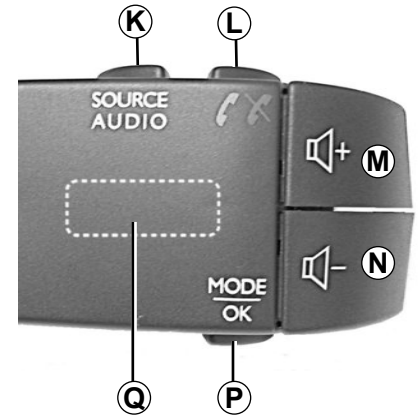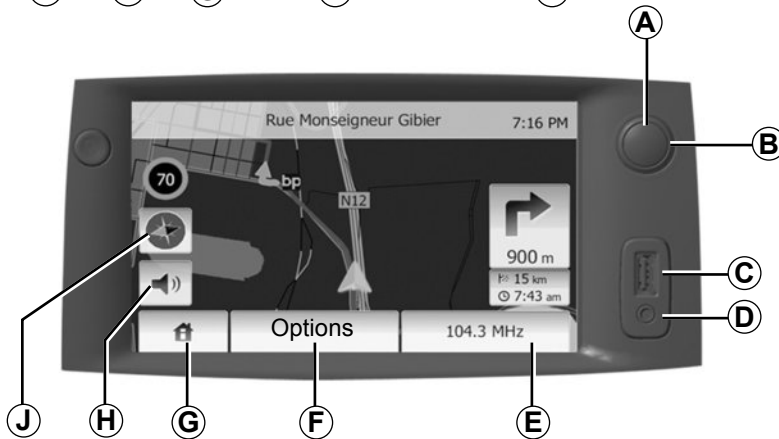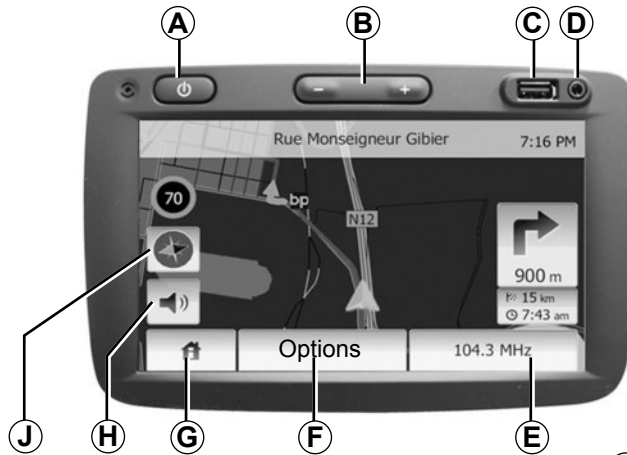

INTRODUCTION TO THE CONTROLS (2/2)

	Function
A	Short press: standby screen mode On/Off
B, MIN	Adjust the volume
C	USB connection
D	3.5 mm Jack socket
E	Access the current media (Radio, AUX)
F	Access the “Options” menu
G	Access the “Home” menu
	Telephone communications or auxiliary sources: exit the window to return to the navigation screen (current)
H	Mute/unmute the voice guidance
J	Change the map view mode (2D/3D).
K	– 1st press: access functions for the source currently in use
	– Successive presses: select the audio source (Radio, AUX)
L	– Answer/end a call
	– Mute/unmute the sound (depending on the vehicle)
M+N	Mute/unmute the sound (depending on the vehicle)
P	Change mode for choosing a radio station (Main, List, Preset)
Q	Rear dial:
	– Radio: search for a radio station. – Media: search for an audio track.
R	Select from the available media (USB, AUX, iPod® and Bluetooth®)
S	Select the audio reception mode/Alternate between AM and FM
T	Confirm your selection

ON/OFF SWITCH



Switching on

The multimedia system switches on automatically when the ignition is switched on.

In other cases, press button **A** to switch on the multimedia system.


With the ignition off, you can use the system for 20 minutes.

Press **A** to make the multimedia system operate for about a further 20 minutes.



Switching off

The system switches off automatically when the vehicle's ignition is switched off.

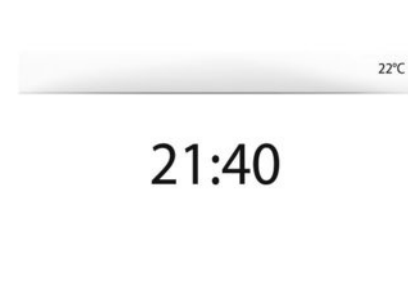

Standby screen

The standby clock mode allows the display screen to be switched off.

When in standby clock mode, the radio or guidance system does not operate.

Briefly press **A** to activate/deactivate the standby screen.

Any **other** action will temporarily reactivate the screen.

OPERATE AND USE (1/2)


Touching screen

Tap (short press):

- Item selection;
- Item execution (Media playing screen).
When touching forwards button, moves toward the next song.


Press and Hold (long press):

- Item store (Radio screen);
When touching with long presses the preset number, stores the current radio channel.
- Move to scroll with acceleration;
When touching with long presses the list down buttons, scroll (per page) with acceleration.
- fast-forward or rewind (Media playing screen).
When touching with long presses forwards or backwards button, fast winding the song.

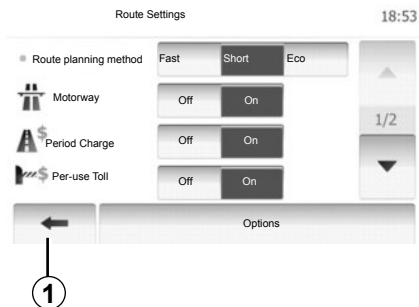

Back to “Home” menu

System goes back to “Home” menu directly once you press and hold **1** whenever it is.

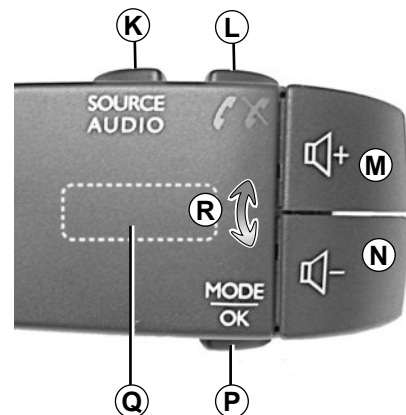


Using the steering column controls

Press button **P** to change the radio station search mode.

Rotate rear dial **Q** to change the station (movement **R**).

Press **K** to change the source (AUX, AM, FM).

OPERATE AND USE (2/2)

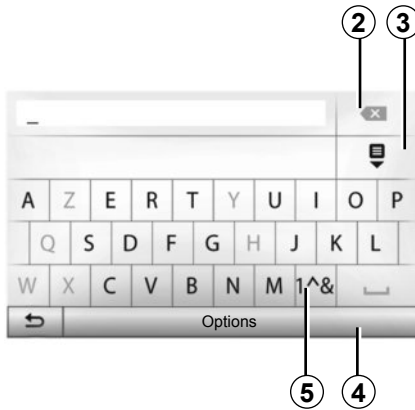

Select **2** to modify your entry.

Select **3** to display list of results.

Select **4** to change the keyboard to special layout.

Select **5** to use numbers and symbols.

Using an alphabetical keyboard

When entering a heading using an alphabetical keyboard, choose each letter by pressing keyboard.

When choosing each letter, the system will remove the brightness of certain letters to help enter the letters.

VOLUME

Volume

Adjust the sound level when listening to the different sources, messages, ringtones and phone communications:

- by pressing or turning **B** (depending on the vehicle);
- or on **M/N**.

The radio source being listened to is interrupted when “TA” traffic information, news bulletins or a warning message is received.



Set the volume to a reasonable level so that outside noise can be heard.

Muting the sound

Press **L** or **M** and **N** simultaneously on the steering column control (depending on the vehicle). The “MUTE” message is displayed on the screen.

Press **L** again briefly, or **M** and **N** simultaneously to continue listening to the current audio source.


This function is deactivated automatically when the volume control is used or when a news or road traffic bulletin is broadcast.

Volume adjustment according to speed

When this function is activated, the audio and navigation volume will vary according to the vehicle speed.

To activate and adjust this function, refer to the information on “Speed dependent volume control” of the section on “Audio settings”.

LISTEN TO THE RADIO (1/3)

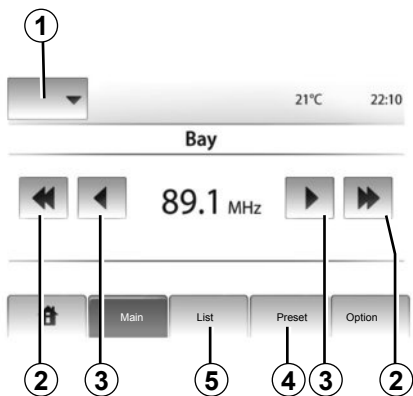

Selecting a wavelength


Press **1**.

Select the wavelength (FM or AM) required by pressing it.

Choosing a station

There are different modes for choosing a radio station.

After having selected the waveband, select the mode by pressing **4** or **5**.

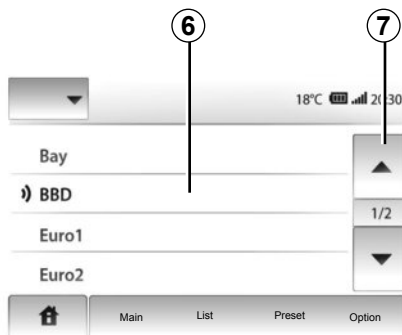

List mode


Select the List mode by pressing **5**.

This operating mode allows you to find a station easily by name from an alphabetical list (with FM only).

It is possible to scan up to 50 available radio stations.

Select the stations required by pressing zone **6**.

Press **7** to scroll through all the stations.

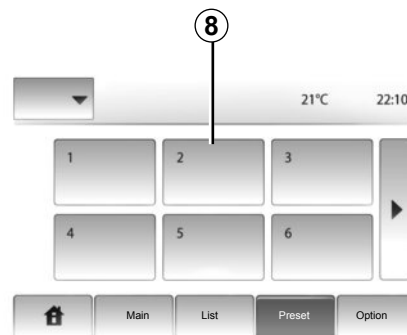

The names of the radio stations that do not use RDS will not appear on the screen. Only their frequency is displayed and sorted at the end of the list.


Preset mode

Select the Preset mode by pressing **4**.

This operation mode allows you to recall on demand those stations which you have already stored (refer to information on "Storing a station" in this section).

Press zone **8** to select your stored stations.

LISTEN TO THE RADIO (2/3)

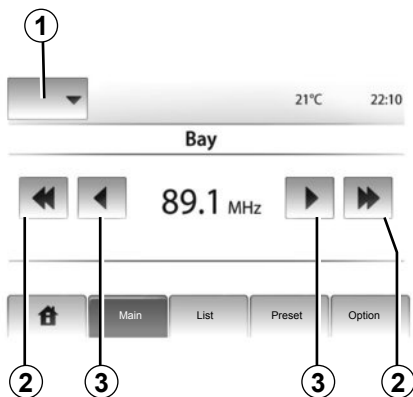


Manual mode

This mode allows stations to be searched manually by scanning the selected wavelength.

Scan the wavelength by repeatedly pressing **3**.

Briefly press **2** to start an automatic search for radio stations.

Repeat the operation each time the search stops if necessary.

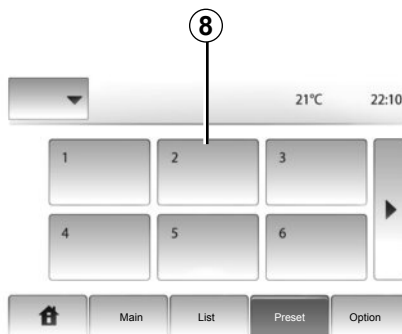


You can also move wheel **Q** to launch an automatic station search.

Storing a station

Select a radio station by using one of the modes described above.

Press and hold one of the buttons on the zone **8**.

You can store up to 12 stations per wavelength.

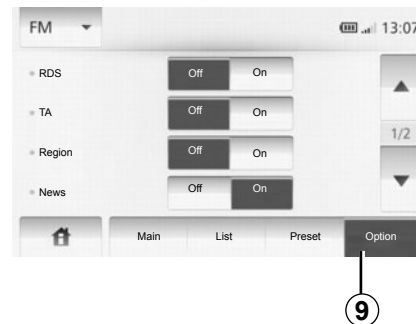

Radio settings

Display the settings menu by pressing **9**. You can activate or deactivate functions by pressing “On” or “Off” (the setting menu varies depending on the wavelength).

The available functions are as follows:

- RDS;
- TA (Traffic announcement);
- Region;
- News;
- AM;
- Update list.

LISTEN TO THE RADIO (3/3)

RDS

Some FM radio stations broadcast text information relating to the programme being listened to (the name of a track, for example).

Note: this information is only available on some radio stations.

TA (Traffic announcement)

When this function is activated, your audio system makes it possible to automatically search for and listen to traffic information when they are broadcast from certain FM radio stations.

Note: the automatic broadcasting of traffic information is deactivated when the audio system is set to the AM band.

Once the function is activated, select the news station then choose if you require another playback source.

Traffic information is broadcast automatically and has priority over the source being listened to at the time.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

Region

The frequency of an FM radio station may change depending on the geographical area.

In order to keep listening to the same radio station when changing region, activate the Région function so that your audio system can automatically retune the frequency.

Note: This is only available for certain radio stations.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate this function.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

News

When this function is activated, it is possible to automatically listen to news when they are broadcast by certain FM radio stations (depending on country).

If you then select the other sources, when a broadcast of the selected programme type is made, it will interrupt the other sources.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

AM

You can activate or deactivate the AM wavelength. To activate/deactivate this function, refer to information on “Radio settings” in this section

Update List

To update the list of stations and obtain the most recent ones, press “Start” (only for FM).

AUXILIARY AUDIO SOURCES (1/3)

Your system is fitted with two auxiliary inputs for connecting an external audio source (MP3 player, portable player, USB key, phone, etc.).

To find the input position, please refer to the section on “Introduction to the controls”.

Principles of operation Connection


There are two types of connections:

- a USB socket,
- a jack.

Connect your portable audio player, depending on the type of device.

Once you have connected a USB socket or jack, the system automatically detects the auxiliary source.

Note: The USB key used must be formatted to FAT32 format and have a maximum capacity of 32Gb.

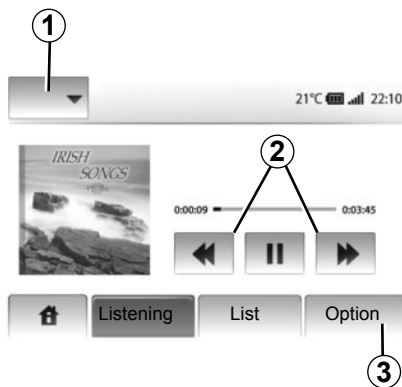

Selecting an auxiliary source

In navigation mode or when listening to the radio, select your auxiliary audio source by pressing “Home” > “MEDIA”. The system starts playing the last audio track played.

Note: Any change to the external audio source which is made when the system is not active will not be automatically taken into account.

To change the auxiliary source, press **1**. A list of available input sources is displayed instantly:

- USB: USBkey, MP3reader, phone (depending on the phone) etc.;
- iPod®: device with integrated iPod® ;
- BT: Bluetooth® devices;
- AUX: 3.5 mm jack.

Audio formats

The auxiliary audio source formats include MP3 and WMA.

Fast winding

Press and hold **2** to fast forward or rewind.

Playback resumes when the button is released.



Only handle the portable audio player when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking).

AUXILIARY AUDIO SOURCES (2/3)

« Repeat »

This function is available in mode «BT» and «USB» and enables you to repeat one track or all the tracks.

Tap **3** and then tap “Off”, “Track”, or “All”.

“Shuffle”

This function is available in mode «BT» and «USB» and enables you to play all the tracks at random. Press **3** then «On», «Off» or «Folder».

Auxiliary input: USB socket, Bluetooth®

Connection: USB and portable digital audio player


Connect the socket of your portable audio player to the USB input on the unit.

Once the USB socket of the digital portable audio player is connected, the “USB” menu is displayed.

Note: Some types of portable digital player may not be connected.

Charging with the USB port

Once your player’s USB socket is connected to the USB port of the unit, you can charge or maintain the battery during use (listening to music, etc.).

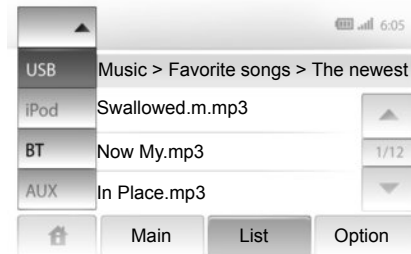

Connection: iPod®

Connect the socket of your iPod® to the USB input on the unit. Once the USB socket of your iPod® is connected, the “iPod” menu is displayed.

Use

The iPod® and devices with integrated iPod® allow the playing of:

- videos;
- music;
- photos.

Note: Use the iPod® cable for exclusive use of an iPod® when connecting an iPod® to the USB socket.

AUXILIARY AUDIO SOURCES (3/3)


Connection: Bluetooth®

Refer to the section on “Connecting/disconnecting Bluetooth® devices”. Once the Bluetooth® is connected, the “BT” menu is displayed.

Use

Depending on the type of player, select a folder (MP3 player, USB key) or a playlist (portable digital player).

Note: Once connected, you can no longer directly control your portable digital audio player. You must use the keys on the system’s front panel.

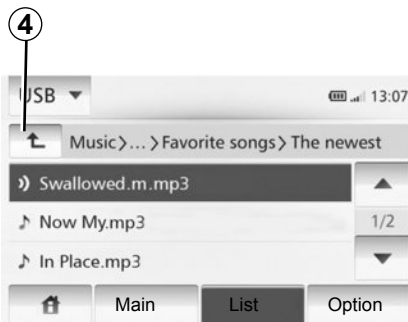

Selecting a track

To select an audio track within a folder, tap “List”.

To go back to the previous level in the folder hierarchy, tap **4**.

By default, albums are listed in alphabetical order.

Note: If you connect a USB key, all the folders will be at the same level on the tree structure.

Depending on the type of digital portable audio player, you can refine your selection by using folders or files.

Note: Use a USB connection in preference for easier music searches.

Auxiliary input: jack

Connection

Connect the jack of your portable player to the jack input socket.


Use

No indication of the name of the artist or the track is displayed on the system’s screen.

Note: You cannot select a track directly from your audio system.


Select tracks directly on your portable player when the vehicle is stationary.

AUDIO SETTING

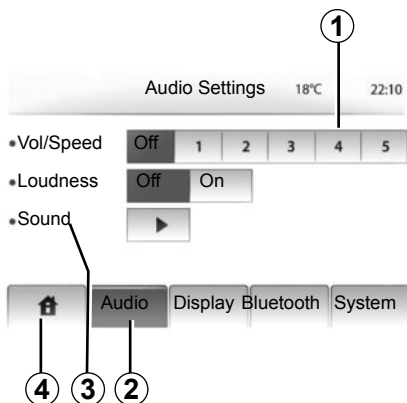

Display the settings menu by pressing “Home” > “SETTINGS”. Press **2**.

You can leave the settings menu by pressing **4**.

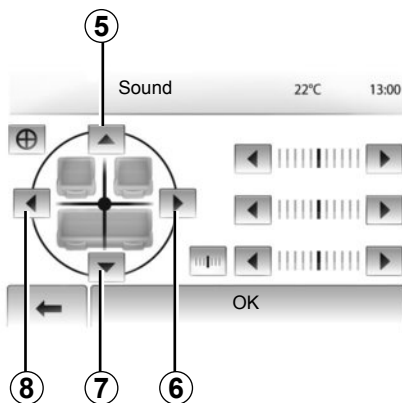

Volume adjustment according to speed (Vol/Speed)

When the speed of your vehicle is more than 40km/h, the volume level outputs higher than original volume level.

Adjust the volume/speed ratio by pressing zone **1**.

Loudness

Tap “On” or “Off” to turn off or on the loudness.

Sound

Display the sound menu by pressing **3**.

Right/left and front/rear balance

Tap **6** or **8** to adjust the sound the left/right balance.

Tap **5** or **7** to adjust the sound the front/rear balance.

After setting balance, tap “OK”.

Bass, Mid, Treble

Tap left arrow or right arrow to adjust the Bass, Mid or Treble.

After setting Bass, Mid or Treble, tap “OK”.

THE NAVIGATION SYSTEM

The navigation system

The navigation system calculates your position and guides you by using data:

- from the GPS receiver;
- from the digital map.

The GPS receiver

The navigation system uses GPS (Global Positioning System) satellites orbiting the Earth.

The GPS receiver receives signals transmitted from several satellites. The system can then locate the position of the vehicle.

Note: after moving a long distance without driving (ferry, rail freight), the system may take several minutes to adjust before retuning to normal operation.

The digital map

The digital map contains the road maps and town maps that the system requires.

“Map” USB key

Install the most recent version by inserting your USB key into a computer that is connected to the Internet. Refer to the section on “Map update”.

Note: USB key is not supplied with the system.


If possible, always use the most recent version.

Insert the USB key

Insert the USB key into the USB socket **C** on the system.



READ A MAP (1/3)

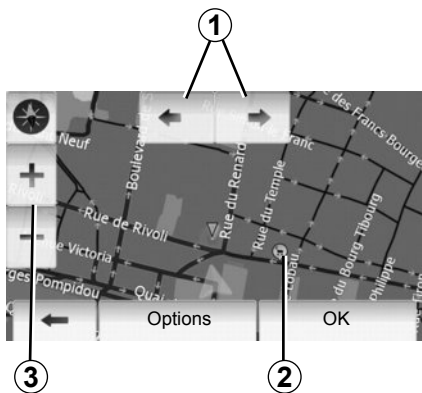

Displaying the map


To display the map around the current vehicle position, press "Home" > "Show map".

Touch the map screen.

To move around the navigation map, drag the desired direction on the screen.

Press **3** to change the scale.

Rotate the map by pressing **1**.

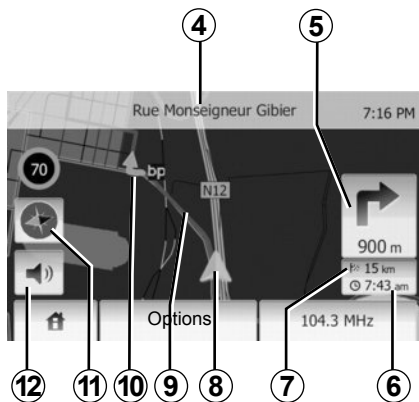

Map key

- 4** Name of the next major road or road sign information, if applicable.
- 5** Distance to and direction of next change of direction.
- 6** Estimated time of arrival.
- 7** Distance remaining to the destination.
- 8** Location of the vehicle on the navigation map.
- 9** Route calculated by the navigation system.
- 10** Indicates the direction change.

11 2D/3D mode.

12 Mute/unmute the voice guidance.

GPS Location info

This function makes it possible to find out the geographical location of the selected position (Address/latitude/longitude).

Touch desired position on the screen. Press "Options" and then press "News" to find out the exact location of the selected position.

2D/3D mode

Press **11** to change the map view between 2D and 3D.

Map icons

The navigation system uses icons **2** to display points of interest (POI). Refer to the information on "Display points of interest" in the section on "Map settings".

READ A MAP (2/3)




Where am I?

This function allows you to check information about the current position and to search for POI nearby. It operates when GPS is connected.

Tap “Options” on the map screen and then tap “Where Am I?”.

This screen includes the following information:

- Latitude;
- Longitude;
- Altitude;
- House number;
- Current address.

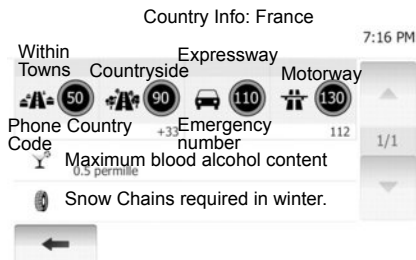

Country information

Press **13** then “Country Info”.

This function allows you to view country information depending on your current position.

This screen includes the following information:

- Speed limits;
Speed limits are displayed for expressways. Displayed unit depends on active regional settings. If data not available, then “...” shown instead of table and number.

- Phone country code;
- Emergency number;
- Legal Restrictions effective in the country:
 - Maximum blood alcohol;
 - Visibility vest required;
 - Fire extinguisher required;
 - Headlights must be on at all times;
 - Spare bulbs required;
 - First aid kit required;
 - Warning triangle required;
 - Helmets required for motorcyclists;
 - Snow chains required in winter;
 - Snow chains recommended in winter;
 - Winter tyres required in winter;
 - Winter tyres recommended in winter.


READ A MAP (3/3)



Nearby assistance

This function allows you to search for assistance near your current position.

Tap **14** to open a new screen for the quick search.

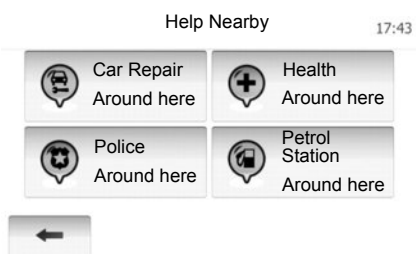

Information on this screen:

- Car repair services;
- Medical and emergency services;
- Police stations;
- Gas stations.

To search a destination from this screen, refer to the section on “Entering a destination” and the information on “Select one of the “Points of Interest (POI)””.

ENTERING A DESTINATION (1/6)

Destination menu

Press “Home” > “NAVI” > “Destination” to access the destination menu.

The destination menu offers several methods to enter a destination:

- enter an address (complete or partial);
- select an address from the “Points of interest” (POI);
- select a destination from the previous destinations;
- select an address from the Favourites;
- select for destination by using the map;
- select a latitude and longitude.

Entering an address

Tap 1

This item allows you to enter all or part of the address: country, town, street and number.

Note: only addresses known to the system through the digital map are authorised.



When using for the first time:

- Tap the “Country”.
- Tap the keyboard button to enter the name of the country required.

When entering the address the system will remove the brightness of certain letters to help enter the address.

The system may suggest several country lists by pressing 2. Select the required country in the lists.

- Proceed in the same way for “Town/ Suburb”, “Street”, “Intersecting Street” and “Street Number”.




Note: “Intersecting Street” and “Street Number” are activated after selecting “Street”.

Note: when entering the street, it is not necessary to specify the type of road (street, avenue, boulevard, etc.).

Note: the system stores previous addresses in its memory. Once you have entered a destination by address, then the next time, it is the previous address that will be given.

ENTERING A DESTINATION (2/6)

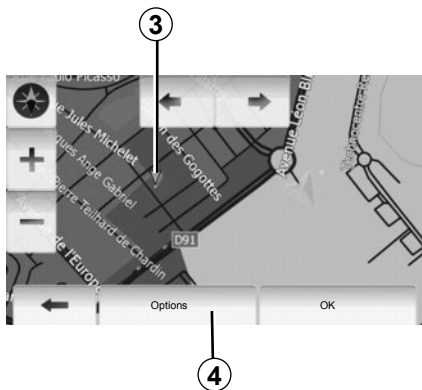

Select from the “Points of interest” (POI)

You can select your destination from the Points of Interest.

You can find a place in different ways:

- with the quick search feature, you can quickly find a nearby place by its name.
- with the preset search feature, you can find frequently searched types of places with only a few screen taps.
- you can search for a place by its category.

Quick search for points of interest

The quick search feature lets you quickly find a place.


Tap the map somewhere to search for points of interest. The point 3 appears.

Press 4 and then “Points of interest around cursor” to show the list of points of interest with names and distance from point 3.

Searching for points of interest using preset categories

The preset search feature lets you quickly find the most frequently selected types of places.


Press “Home” > “NAVI” > “Destination” > “Points of interest” to access preset categories.

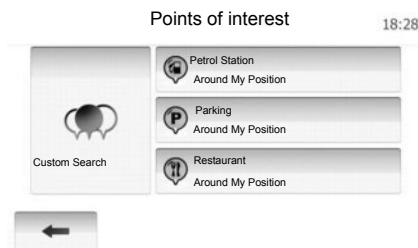

Categories (petrol station/parking/restaurant)

- If an active route exists, “Petrol Station” and “Restaurant” are searched along the route, and “Parking” is searched around the destination.
- If there is no active route (destination is not selected), they are searched around the current position.
- If the current position is not available either (no GPS signal), they are searched around the last known position.

ENTERING A DESTINATION (3/6)

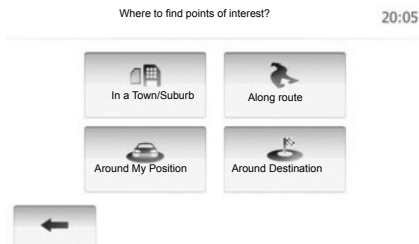

Searching for Points of Interest by category

You can search for Points of Interest by their categories and subcategories.

Tap “Home” > “NAVI” > “Destination” > “Points of interest” > “Custom Search”.


Select the area around which the place should be searched for:

- Tap “In a Town/Suburb” to search for a place within a selected town/suburb (the result list will be ordered by the distance from the center of the selected city/town).

- Press “Along route” to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for nearby petrol stations or restaurants (the result list will be ranked by the length of the necessary detour).

- Tap “Around My Position” to search around the current position or if it is not available, around the last known position (the result list will be ordered by the distance from this position).

- Tap “Around Destination” to search for a place around the destination of the active route (the result list will be ordered by the distance from the destination).

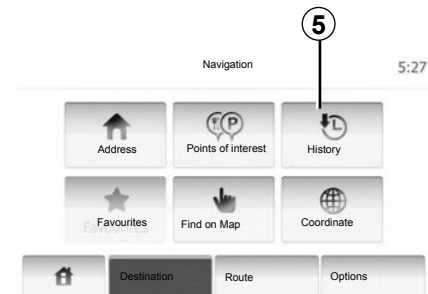

Selecting a destination from the previous destinations

You can find the destination to a location that you have lastly set as the destination. Tap 5.


ENTERING A DESTINATION (4/6)

Selecting an address from the Favourites

You can find the destination to a location stored in the Favourites. To utilize this function more effectively, destinations that you often travel to should be stored in advance.

First of all, store in the Favourites by searching the address. Refer to the section on "Managing the favourites".

Tap "Home" > "NAVI" > "Destination" > "Favourites" to display the list of favorite destinations.

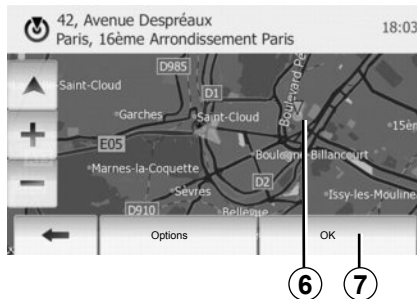


Selecting for destination by using the map

This allows you search for a destination by scrolling the map.

Tap "Home" > "NAVI" > "Destination" > "Find on Map" to select destination on the map.

Press on the location on the map that you want to select as your destination. The **6** point is displayed.

Tap **7** to select the point **6** as the destination.

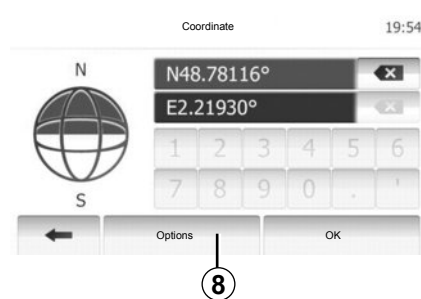

Entering the coordinate of the destination


This allows you search for a destination by entering its coordinate.

Tap "Home" > "NAVI" > "Destination" > "Coordinate".

You can enter the latitude and longitude values in any of the following formats: decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.

Tap **8** and then tap "UTM" to enter the coordinate in UTM format.

ENTERING A DESTINATION (5/6)

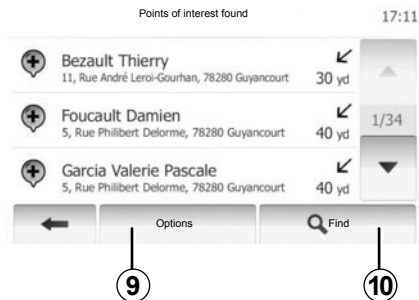


Sorting the list

The result of searching a destination by point of interest, history and favourites can be sorted by name and distance. If an active route exists, they can be sorted by detour. And they also can be shown all on map. Tap **9**.

Finding a destination by names

In case of selecting a destination by point of interest, history and favourites, you can search for destination in the list by their names. Tap **10** and enter names using keyboard.

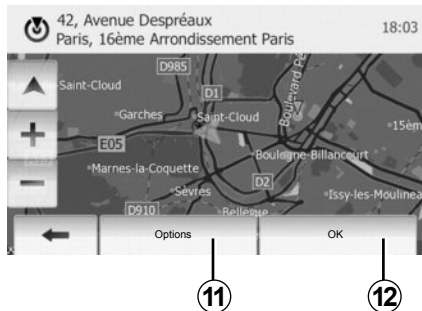

Confirming the destination

There are several possible options before confirming a destination:

- OK;
- Add to favourite destinations;
- Info;
- Return to vehicle.




OK

- If there is no active route (destination is not selected), tap **12** to confirm the destination as a new route.
- If an active route exists, you can select the destination as a new route or waypoint. Tap **12** and then tap “New Route” or “Waypoint”.

Add to favourites

Tap **11** and then tap **13** to store selected destination in favourites.

ENTERING A DESTINATION (6/6)

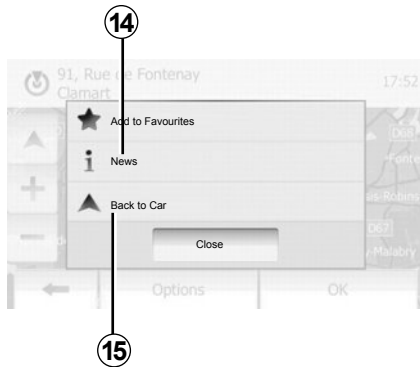


Info

This item allows you to consult the address, latitude, longitude and phone number (phone number is only activated after selecting a point of interest). Tap **14**.

Return to vehicle.


Press **15** to return to the current vehicle position.

GUIDANCE (1/5)

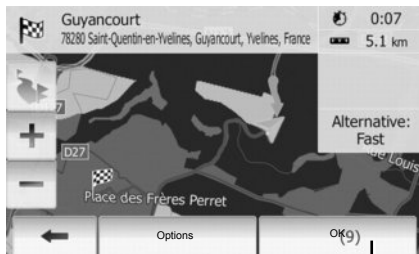

Activating guidance

Tap **1** or wait 10 seconds after having entered a destination. Guidance will begin.

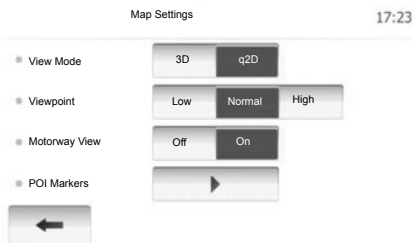

Guidance screens


The system will offer several different navigation maps.

Press “Home” > “Options” > “Map Settings” and then press “2D” or “3D” to change the map display.

You can also change the map display by pressing compass on the map.

The different possible full screen displays are:

- 2D;
- 3D.

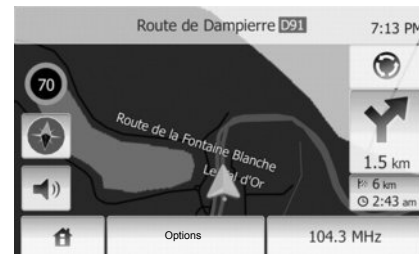


Full screen mode (2D or 3D)

This mode allows you to view the navigation map on the entire screen.

The information on the arrival time and the distance remaining to the destination are located in the bottom right of the map.

The indication for the next change of direction is located in the right side of the map.

GUIDANCE (2/5)

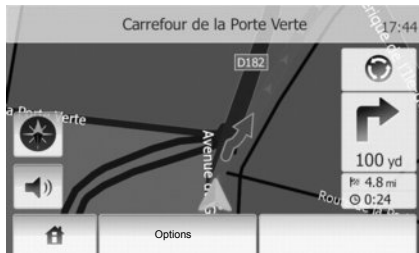

Intersection map

During guidance, before each change of direction, the system will automatically display a close-up of the intersection.

The system will automatically switch back to normal scale after you have passed through the intersection.



Motorway junction view

During guidance, before each motorway junction, this system will display a 3-dimensional view of the junction.

Note: for some junctions, only a small turn arrow will appear on the map. The system will switch back to normal mode after you have passed the junction.

Changing voice guidance language

Press **2** and then "NAVI" > "Options", "Voice Settings" to change the language of the voice guidance.



Scroll the language list by pressing **4**. Tap the desired language and then tap **3** to confirm.

Listening to the radio during voice guidance

While listening to a radio station, the system cuts off the radio sound while the voice guidance is active before each change of direction.

The system will automatically switch the sound back on once you have passed through the junction.

GUIDANCE (3/5)

Route information

This function allows you to view your route.

Select “Home” > “NAVI” > “Route” after entering a destination.

Six choices will be given:


- “Edit Route”,
- “Avoidances”,
- “Overview”,
- “Cancel Route”,
- “Route Alternatives”,
- “Route”.

Route overview

Press “Home” > “NAVI” > “Route” > “Overview” to get a map with an overview of the active route.

The following information will be given:

- The name and/or address of the destination;
- The total time of the route;
- The total distance of the route;

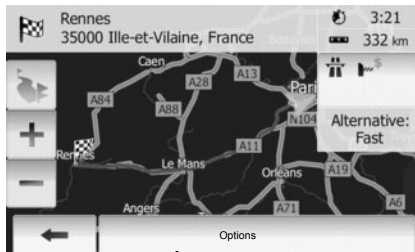


- the special points and sections of the route (e.g. toll gates, toll roads, motorways, etc.);
- alternative routes (e.g. Short, Fast, Economical).

Press **5** to display the following options:

- alternative routes;
- route;
- route settings.

Note: for further information, please see overleaf.

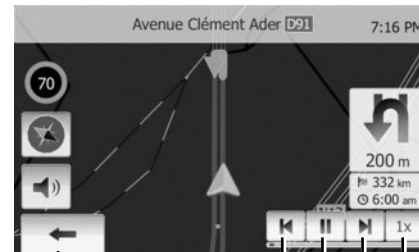

- Simulate Navigation

This function allows you to quickly view the required route.


Start or pause the simulation by pressing **8**.

Tap **10** to increase the speed of the simulation.

You can leave the route simulation at any given moment by pressing **6**.

You can move to previous/next manoeuvre by pressing **7** or **9**.

GUIDANCE (4/5)

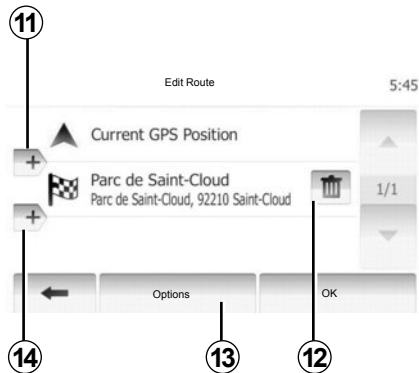


Edit route

Press “Home” > “Route” > “Edit Route” to modify the route by changing the list of stages. You can add or remove waypoints, reorder the list.

Tap **11** to add waypoints and tap **14** to add a new destination. It offers several methods to enter a destination. see the “Entering a destination” section.

Tap **12** to delete a destination.

Tap **13** to reorder the list.

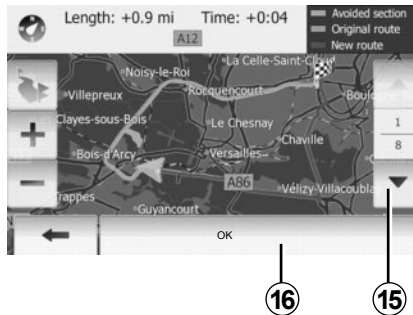

Avoidances

Tap “Home” > “Route” > “Avoidances” to make a detour. Tap a section on the list you want to make a detour.


You can change the section by pressing **15**.

Confirm the new route by pressing **16**.

Cancel the route

At any given moment, you can stop the guidance.

Press “Home” > “Route” > “Cancel Route” to cancel the active route.

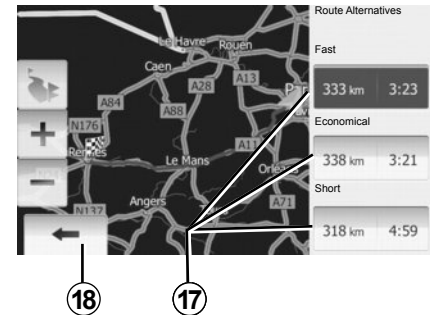

Route Alternatives

This item allows you to change route planning method.

There are three options with distance and time to change route planning method:

- Fast;
- Economical;
- Short.

Refer to the information on “Route settings” in the section on “Navigation settings”.

Tap “Home” > “Route” > “Route Alternatives” and then tap **17**.

Confirm the new route by pressing **18**.

GUIDANCE (5/5)



”Route”

This function makes it possible to view the route plan.

Several details of the route will appear:

- direction-change arrows;
- road number;
- distance before a fork.

Tap **19** to sort the details of the route:

- by summary;

It only shows the waypoints (start, via, destination) and their distance, remaining time and arrival time.

- by normal;

It shows all the maneuvers and their signpost information, route numbers, street name and distance. It also shows informational and warning entries, such as settlement names the driver enters, restrictions (access and maneuver restrictions), ignored user preferences, etc.

- by road list.

It sections the route to road names and road numbers. It also shows their length, average direction and travel time information. Waypoints are not shown in this mode.


”Map Settings”

This item enables you to choose your route settings.

Refer to the information on “Route settings” in the section entitled “Navigation settings”.

Note: Configuring the route according to the road type selected can strongly affect the proposed route.

MAP SETTINGS

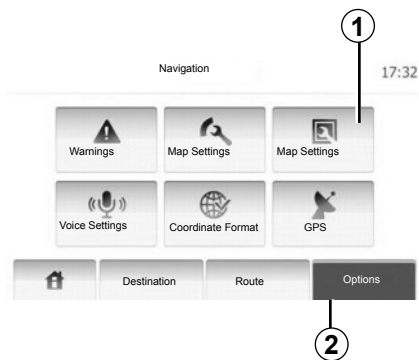


Tap **2** and then tap **1** to access map setting menu.

Adjusting view mode

This function allows you to switch the map view between a 3D view and a 2D top-down view.

Press “3D” or “2D”.

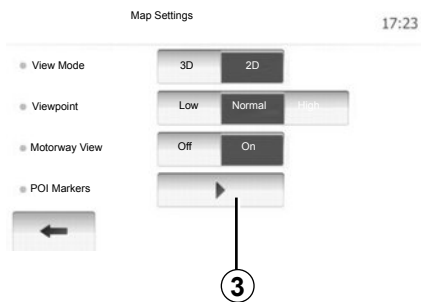

Adjusting viewpoint

This function allows you to adjust the basic zoom and tilt levels to your needs. Three levels are available.

Press “Low”, “Normal” or “HIGH”.

Motorway View

This function allows you to activate or deactivate motorway view.

Tap “On” or “Off”.

Display points of interest

You can select certain points of interest (visible at 100 m scale) to be displayed on the map.

To access this function directly, press **3** to display the points of interest on the map:

- Accommodation;
- Airport;
- Automotive;
- Business;
- Cafe or Bar;
- etc.

Tap “On” or “Off” to show or hide the points of interest.

Tap the name of the point of interest to open the list of its subcategories.

Note: In countries for which maps are not available, you can deactivate the navigation function. Press “Off” in “System setting” to deactivate the navigation function.

MANAGING THE FAVOURITES (1/2)




Creating an entry

Tap "Home" > "Destination" to access the destination menu. You have a number of methods available to enter a destination:

- Address: refer to the information on "Entering an address" in the section on "Entering a destination".
- Point of interest: please refer to the information on "Selecting a point of interest (POI)" in the section entitled "Entering a destination".

- Address: refer to the information on "Entering an address" in the section on "Entering a destination".
- History: refer to the information on "Select a destination from the previous destinations" in the section entitled "Entering a destination".
- Find on Map: refer to the information on "Selecting a destination on the map" in the section on "Entering a destination".
- Coordinate: refer to the information on "Entering the coordinate of the destination" in the section on "Entering a destination".

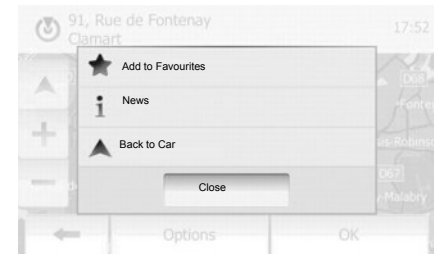

In all cases, once the address is confirmed, the system will locate it on the map. Tap "Options" and then tap "Add to Favourites" to the destination as favourites.

Before saving favourites, you can change the name of the favourite by using keyboard.

MANAGING THE FAVOURITES (2/2)



Sorting the list

The result of saved favourites can be sorted by name, distance, and shown all on map. Press “Options”.

Deleting the favourites

Tap the favourite you want to delete. Tap “Options”, “Delete favourite” and confirm by pressing “Delete”.


To delete all favourites, tap “Options” and then tap “Delete All”. Confirm by pressing “Delete All”.

Searching the favourite

This function allows you to search the favourite in the list by its saved name.

Tap “Find” and enter the name of the favourite by using keyboard.


NAVIGATION SETTINGS (1/4)

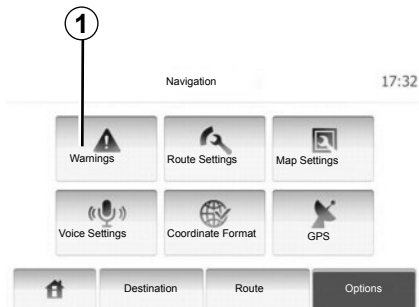

The “Navigation Settings” menu allows you to change the display of the map or navigation parameters.

Warnings

This item allows you to set up warnings. Tap **1** to access menu of warnings.

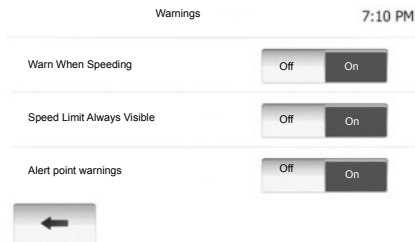

Warn when speeding

Maps may contain information about the speed limits of the road segments. The system is able to warn you if you exceed the current limit. This information may not be available for your region or may not be fully correct for all roads on the map.

The following alert types are available:

- Audio warning: you receive a non-verbal warning when you exceed the speed limit.
- Visual warning: the current speed limit is shown on the map when you exceed it.

Tap “On” or “Off” to turn on or off the warning.


Speed limit always visible

You can set speed limits always visible. This function can be turned on or off in this menu.

Alert point warnings

When the driver passes an alert point, a warning sign appears on the screen. This function can be turned on or off in this menu.

NAVIGATION SETTINGS (2/4)

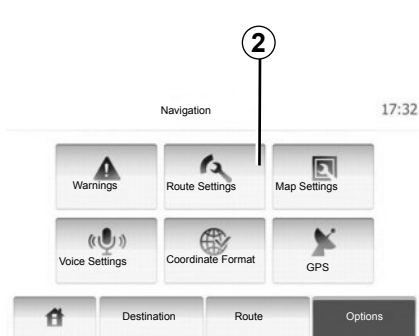

Route settings


This function allows you to set how routes will be calculated.

Tap **2** to access menu of route setting.

Route planning method

This system will offer 3 main route priority criteria:

- Fast: gives a quick route if you can travel at or near the speed limit on all roads;

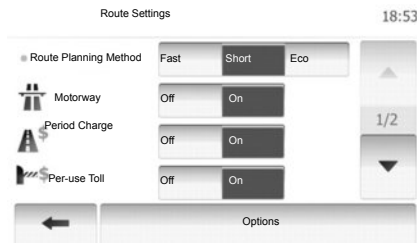

- Short: gives a short route to minimise the distance to travel;
- Eco: this mode produces a compromise between fast and short routing modes. If you can save a certain distance by travelling for slightly longer time in exchange, it will do just that. The resulting route might be shorter than the fast variant, but not significantly slower.

Motorway

You might need to avoid motorways when you are driving a slow car or you are towing another vehicle.

Period charge

It enables or disables the use of roads for which a special license has to be purchased in order to make use of these roads during a certain period.

Per-use toll

It enables or disables the use of roads for which toll has to be paid to use only once a certain part of a road.


Ferries

It enables or disables the usage of all types of ferries, ships and trains.

Off-road tracks

Authorise or do not authorise the use of off-road tracks.

NAVIGATION SETTINGS (3/4)

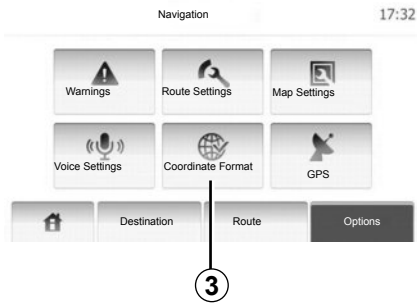

Map settings

Refer to the information in the section on “Map settings”.

Voice settings

This function allows you to change the language of voice guidance.




Data format

This function allows you to change the format of coordinate.

Tap **3** to change the format of coordinate.

This system will offer 3 types of format.

NAVIGATION SETTINGS (4/4)

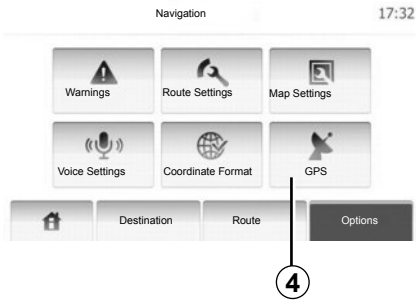


GPS


This function allows you to check the status of GPS satellites.

Tap **4** to see the GPS information (screen **A**).

A

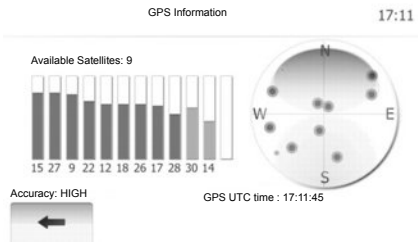

DRIVING ECO²

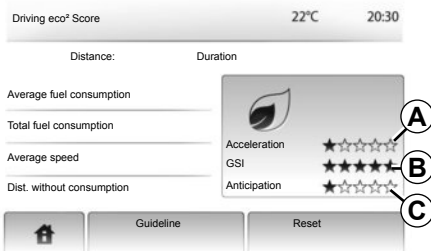

Access the Driving eco² menu

(Depending on the vehicle)

From the main menu, press “Vehicle”, then “Driving eco²”.

The “Driving eco²” menu grants access to the following information:

- “Journey record”;
- “Guideline”.

“Journey record”

This menu shows you the data saved from your last journey:

- “Average fuel consumption”;
- “Total fuel consumption”;
- “Average speed”;
- mileage done without consuming fuel;
- average environmental driving performance (**A** zone);
- gear change indicator (**B** zone);
- braking anticipation (zone **C**).

Note: Press the “Reset” button on the instrument panel to start a new journey once the application has launched.

”Guideline”

This menu assesses your driving style and gives you the best possible advice to optimise your fuel consumption.

PAIRING, UNPAIRING BLUETOOTH® DEVICES (1/2)

Bluetooth® connection

Check that the Bluetooth® connection is "On". To do this, tap "Home" > "SETTINGS", select "Bluetooth".


Pairing Bluetooth® devices

In order to use your hands-free system, you must pair your Bluetooth® mobile to your vehicle before using it for the first time. Pairing will enable the system to recognize and store a device. You can pair up to 8 devices, but only one can be connected at a time to the hands-free system.

Pairing is carried out directly on your device.



Your hands-free system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

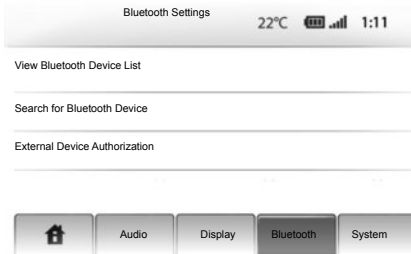

Your multimedia system and device must both be switched on.

Note: When pairing, ensure that no other device already paired is connected to the hands-free system.

Press "Search for Bluetooth Device" or "External Device Authorization" on the screen.

Pairing a Bluetooth® device from the multimedia system

Press "Search for Bluetooth Device".

From your device, carry out the procedure in the following order:

- activate the device's Bluetooth® connection;
- run a search for nearby Bluetooth® devices;
- select your device from the list of devices found by the multimedia system;
- enter the Bluetooth® code "0000" on the device keypad.

Note: Some devices do not require the Bluetooth® code.

The device is automatically stored and connected to the vehicle. If pairing fails, repeat these operations.

For more information, refer to your device's user guide.

Depending on the make and model of your device, the hands-free functions may be partially or fully incompatible with your vehicle system.

PAIRING, UNPAIRING BLUETOOTH® DEVICES (2/2)

Pairing a Bluetooth® telephone to the multimedia system from the phone


- activate the Bluetooth® connection on your device;
- from the multimedia system, press “External Device Authorization”;
- On your device, select “MEDIA-NAV” (name of hands-free system) from the list.

Note: In the event that a device is not connected, press the **L** button. Two options are displayed:

- search for peripherals;
- display peripherals.

The device is automatically stored and connected to the vehicle. If pairing fails, repeat these operations.

For more information, refer to your device’s user guide.

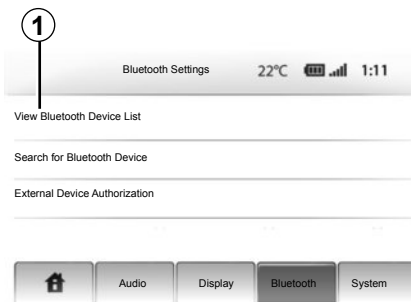

Unpairing Bluetooth® devices

Unpairing erases a device from the hands-free system memory.

Tap **1**. Press the waste-bin icon on the device name to remove it from the list. Confirm your choice by selecting “OK”.

You can also delete all devices in the list by pressing “Options”, “Delete All” and confirm your choice by selecting “OK”.

Connection failure

If connection fails, check that:

- your device is switched on;
- the device is configured to accept the system’s automatic connection request;
- your device battery is not flat;
- your device has previously been paired to the hands-free system;
- the Bluetooth® for your device and the system are activated.

Note: Using your hands-free system for prolonged periods of time will discharge your device’s battery more quickly.

CONNECTING, DISCONNECTING BLUETOOTH® DEVICES

Connecting a Bluetooth® device

Your device must be connected to the hands-free system in order to use all its functions.

It is not possible to connect a device to the hands-free system if it has not first been paired. Refer to the information on “Pairing/unpairing Bluetooth® devices”.

Once the system is initiated, the hands-free system will search for the last peripheral connected present in the vicinity (the search may take a minute).

If a call is in progress when the connection is made, it is transferred to the vehicle speakers.

Note: You are recommended to accept automatic device recognition.

Connection failure

If connection fails, check that:

- the device is configured to accept the system’s connection request;
- your device is switched on;
- your device battery is not flat;
- your device has been paired to the hands-free system;
- the Bluetooth® for your device and the system are activated.

Note: Using your hands-free system for prolonged periods of time will discharge your device’s battery more quickly.

Changing a connected phone

The multimedia system can store up to 8 Bluetooth® devices.

You can connect/disconnect one of the 8 Bluetooth® devices at any time.

Tap “Home” > “SETTINGS”, select “Bluetooth”. Tap the “View Bluetooth device list”.

Tap the device to be connected and confirm by pressing “OK”

If a call is in progress when the phone is disconnected, the call will automatically switch to your phone.

PHONE BOOK



Tap **1** to scroll the list and then tap “Phone Book” to access the system’s Phone Book.

Using your Phone Book

You can use the Phone Book entries stored on the memory of phone.

After connecting your system and Bluetooth® phone via Bluetooth® wireless technology, the numbers in your device Phone Book are automatically transferred into the system’s Phone Book.

Note: system may ask whether to transfer phone’s Phone Book into system’s Phone Book in certain phones.

Calling a number in the Phone Book

After finding the contact in the Phone Book you want to call, you can select the number and make a call.

Searching the Phone Book contact by alphabet

If there are many contacts in the Phone Book list, it can be useful to display them in the alphabetical order for easier searching.

Tap **2** and then enter the name of contact you want to search by using keyboard.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

MAKING A CALL



Dialling a number from the phonebook

Refer to the information on “Calling a number in the phonebook” in the section on “Phonebook”.

Making a call from the phonebook

With the telephone connected, from the “Phone device” menu, press “Phone Book”.

Select the contact (or the relevant number if the contact has more than one). The call will be started automatically after you press the contact’s number.

Dialling a number from the call history

You can use the calling list stored on the memory of phone.

After connecting your unit and Bluetooth® phone via Bluetooth® wireless technology, the numbers in your phone’s All Calls, Outgoing Calls, Incoming Calls, and Missed Calls list is transferred automatically into calling list.

Press **1** to scroll through the list, then “List of calls”.


Tap **5** to access to the list of All Calls.

Tap **4** to access the list of Outgoing Calls.

Tap **3** to access the list of Incoming Calls.

Tap **2** to access the list of Missed Calls.

For each list, the contacts are listed from the most recent to the oldest. Select a contact to make the call.

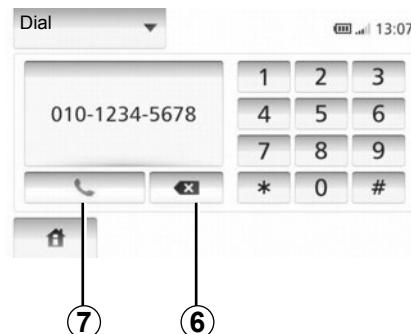

Entering a number

Tap **1** to scroll the list and then tap “Dial” to make a call entering a number.


Tap the number buttons to make a call and then tap **7**

To correct a number tap **6**. Press and hold **6** to delete all the numbers at once.



It is recommended that you stop your vehicle before entering a number or searching for a contact.


RECEIVING A CALL

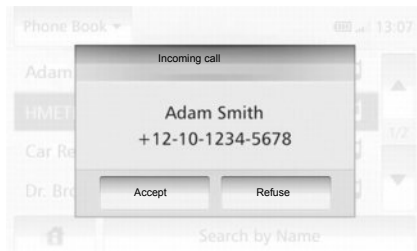

Receiving a call

When receiving a call, the reception screen is displayed with any information available on the caller:

- the name of the contact (if the number is present in the phonebook list);
- the caller's number;
- "Unknown" (if the number cannot be viewed).

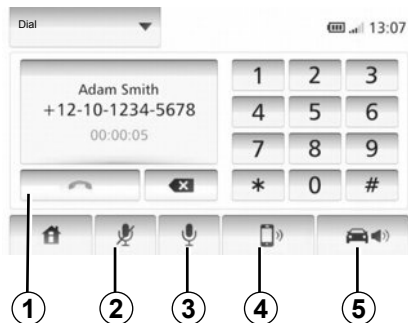


During a call

During a call you can:

- switch the microphone on/off by pressing **2** or **3**;
- hang up by pressing **1**;
- hear sound through the phone speaker by pressing **4**;
- hear sound through the vehicle speaker by pressing **5**.

REVERSING CAMERA

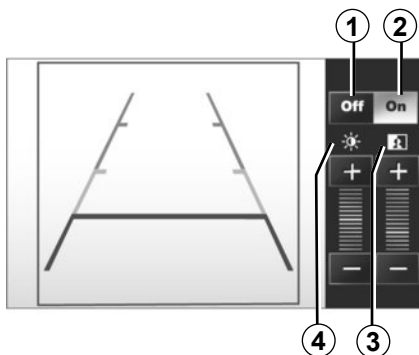

Operation

When reversing (and up to approx. 5 seconds after shifting to another gear), a view of the area behind the vehicle is displayed on the instrument panel together with the guide lines and the contrast and brightness controls.

When the red zone is reached, use the bumper image to stop accurately.

Note: Make sure that the reversing camera is not obscured (by dirt, mud, snow, etc.).

Guide activation, deactivation

You can activate or deactivate the guide display by pressing **1** or **2**.

Settings

Press “+” or “-” to set the contrast **3** and the brightness **4**.



This function is an additional aid. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver.

The driver should always look out for sudden hazards during driving: always ensure that there are no moving obstacles (such as a child, animal, pram, bicycle, etc.) or small, narrow objects such as stones or posts in your path when manoeuvring.

Note: For further information on the reversing camera, please see your driver's handbook.

The screen shows a reverse image.


The gauge is a representation projected onto flat ground. This information must not be taken into account when superimposed on a vertical object or an object on the ground.

Objects which appear on the edge of the screen may be deformed.

In very bright light (snow, vehicle in sunshine etc.), the camera vision may be adversely affected.

When the boot is open or badly closed, the message “BOOT OPEN” appears and, depending on the vehicle, the camera display will disappear.

SYSTEM SETTINGS (1/2)

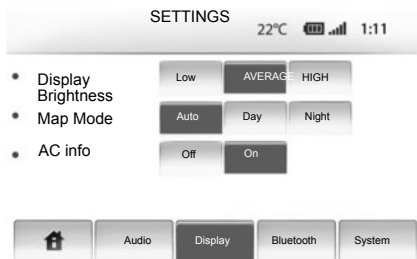

To access the system parameters:


- Tap “Home”, “SETTINGS”;
- tap the menu on the bottom of the screen;
- select an item.

Display settings

Display brightness

You can set the brightness of the screen.

Set the display brightness to «Low», «Mid» (Medium) or «High».

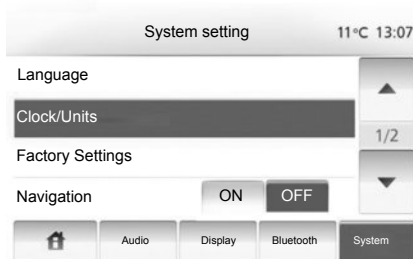

« Map Mode »

To improve the visibility of the map screen between day and night, you can change the combination of the colours of the map.

- «Auto»: the GPS displays the map screen. The switch to daytime or night-time running lights is automatic, depending on whether the headlights are on.
- «Day»: the map screen is always displayed with bright colours.
- «Night»: the map screen is always displayed using darker colours.

« AC info »

This function activates/deactivates the display of air conditioning information when adjusting settings.

System settings

« Language »

This function allows you to change the language used in the system and voice guidance language.

SYSTEM SETTINGS (2/2)

« Hour »

This function allows you to choose between «12H» and «24H» time format.

Note: The time is set automatically by the GPS system, so you will need the maps for the country in which you are currently located to get the local time.

To change the time manually, press “Clock/Units”, then select “Time Setting”.

« Units »

This function allows you to set the unit of distance displayed on your navigation system. You can choose between «km» and «mils».

« Factory Settings »

This function allows you to initialize various settings to the default settings.

- «All»: resets all the settings to the default settings.
- «Phone device»: resets all the settings related to the phone.
- «Navigation»: resets all the settings related to navigation.
- «Audio-Media-Radio-System»: resets all the settings related to Audio/Media/Radio.

« Navigation »

This function enables you to activate or deactivate the system navigation.

« System Version »

This function allows you to check the version of system.

Audio setting

Please refer to the “Sound settings” section.

« Bluetooth Settings »

Refer to the section entitled “Pairing/unpairing Bluetooth® devices”.

UPDATING THE SYSTEM (1/4)



Using the USB key and a computer with an Internet connection, you can:

- update your map content;
- update the system;
- purchase new maps;
- upgrade the POI content.

In certain countries it is illegal to download and activate the warning areas and this can lead to prosecution.

Installing the software

Install the Naviextras Toolbox in a few clicks on your computer. The Toolbox can be downloaded from the manufacturer's website.

After downloading the installation file from the website <http://renault.naviextras.com>, simply double-click the file to start the installation.

Follow the instructions shown on the screen.

Creating an internet account

To log in, click on the “Not logged in” icon in the toolbar at the top of the page or click the “Log in” button on the main screen of the Toolbox. If you are not registered on the website Naviextras.com, you can do this from the Toolbox by clicking on “Register” on the log-in page.



Latest map guarantee

Once your new vehicle has been delivered, you will have a maximum of 90 days in which to update the map for free. Once this time has elapsed, you will need to pay for updates.

The screens shown in the user manual are not contractual.

UPDATING THE SYSTEM (2/4)


Registering the system with the Toolbox

To register your multimedia system on your user profile, first insert an empty USB key into the multimedia system.

Note: To insert the USB key, see the section “Navigation system” in your manual, especially “Inserting the USB key”.

Note: the USB key is not provided with the system.

Note: The USB key used must be formatted to FAT32 format and have a minimum capacity of 4GB and a maximum capacity of 32GB.

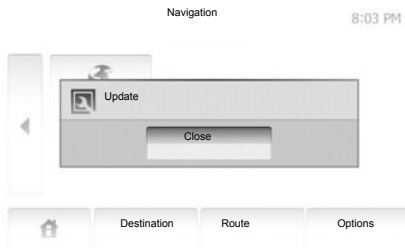

Saving the system on a USB key

When the USB key is inserted into the multimedia system's USB port, select “Navigation” > “Options” > “Map Update” > “Options” > “Update” on the second page.

This creates a fingerprint of your navigation system on the USB key which is going to be used by the Toolbox to register your system to your account and to let the Toolbox determine which updates are available for your system.

Insert your USB key in your computer (the computer must already be connected to the internet). When your system is successfully connected and the Toolbox finds it in the list of supported systems, the system (or software) name will appear at the top of the Toolbox window.

If you have followed the instructions, and successfully connected your USB key and then logged in, then your system is already registered into your user profile.

UPDATING THE SYSTEM (3/4)

Downloading updates to the USB key

If you purchased any free or pay contents, please click on the updates button in the menu bar on the left side of Toolbox.

The updates button will open a screen which shows all available updates, including:

- items that you have purchased but not yet installed (updates or extras);
- free updates and extras that you added to the installation file from the catalogue;
- system updates (if a newer version available);
- and special free updates.

The list shows all available updates by region in a list and on a world map.

By default, all items belonging to all regions are selected for installation. If you decide to skip a region for now, uncheck the checkbox at the beginning of its table row. After reviewing the table, click “Install” at the bottom of the screen to start the installation process.

The Toolbox starts to download and install the selected updates. Please wait until you see the message indicating the update has finished.

The Toolbox warns you if the selected items exceed the maximum storage of navigation system. In this case, you can select which items can be installed or removed in the system so that it does not exceed the storage limit.

Even if items are removed in the system, you still have ownership of items and can install them later for free.

Please neither remove the USB key from the system, nor shut the system down while update is in progress.



In certain countries it is illegal to download and activate the speed camera warnings and this could lead to prosecution.

UPDATING THE SYSTEM (4/4)

Updating the system and map

Downloading updates to the vehicle


When the process of downloading is completed, the USB key can be removed from the computer. Insert the USB key into the USB port of the multimedia system.

When the system is turned on, it automatically identifies the available updates on the USB key, and offers to update the system or map from the updates found on the USB key. Do not switch off your multimedia system while the update is being installed.

Note: downloading and installing a system update is only possible if there is a newer version available.

The system might be restarted automatically during the update process. Please wait to display the radio screen.

A

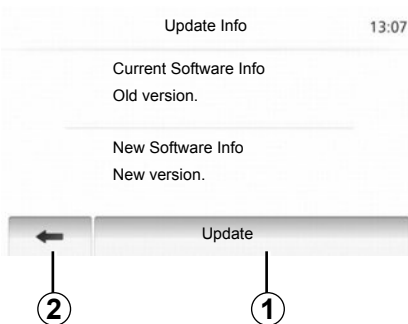

- The screen **A** is displayed automatically once the USB key is connected;
- press **2** to run the update;
- previous **1** to go back to the previous screen.

The update procedure starts automatically. Do not use any of the system functions during the update procedure.

When the update is completed, the multimedia system restarts with all new and up-to-date functionality.

Licence

To obtain the GPL, LGPL, MPL and other open source licence source codes in this product, please visit the <http://opensource.lge.com> website.

As well as the source code all the terms of the licence, warranty exclusions and copyright details are available for download.

LG Electronics will also provide you with Open Source code on a CD-ROM against payment of distribution costs (such as media, shipping and handling costs) on request by post to opensource@lge.com.

This offer is valid for three years as of the date on which you purchased the product.

If the update is accidentally interrupted, restart the process from the beginning.

OPERATING FAULTS (1/2)

System		
Description	Causes	Solutions
No image is displayed.	The screen is on standby.	Ensure that the screen is not on standby.
	The system is deactivated.	The interior temperature of the vehicle is too low or too high.
No sound can be heard.	The volume is set to minimum or mute.	Increase the volume or deactivate mute.
No sound comes from the left, right, front or rear speakers.	The balance or fader settings are incorrect.	Adjust the sound balance or fader correctly.

Navigation		
Description	Causes	Solutions
No sound can be heard.	The volume on the "Navigation" menu is set to minimum or mute.	Increase the volume ("Options" in the "Navigation" menu) or deactivate the mute function. The volume in GPS mode can be adjusted during voice guidance.
The location of the vehicle on the screen does not correspond to its actual location.	Incorrect positioning of the vehicle caused by GPS reception.	Move the vehicle until reception of the GPS signal is improved.
The directions on the screen do not correspond to the actual road.	The version of system is out of date.	Obtain the latest version of the system.
Certain items on the menu are not available.	Depending on the current command, some items will be unavailable.	

OPERATING FAULTS (2/2)

Navigation		
Description	Causes	Solutions
Voice guidance is unavailable.	The navigation system does not include the intersection. Voice guidance is deactivated.	Increase the volume. Ensure voice guidance is activated.
The directions of the voice guidance do not correspond to your exact location.	The voice guidance may vary according to the environment.	Drive according to the actual conditions.
The suggested route does not start or end at the required destination.	The destination is not yet recognised by the system.	Enter a road near to the required destination.

Phone		
Description	Causes	Solutions
No sounds or ringtone can be heard.	The mobile phone is not connected to the system. The volume is set to minimum or mute.	Ensure that the mobile phone is connected to the system. Increase the volume or deactivate mute.
Impossible to make a call.	The mobile phone is not connected to the system. The phone keypad has been locked.	Ensure that the mobile phone is connected to the system. Unlock the phone keypad.

ALPHABETICAL INDEX (1/2)

A

address book.....GB.27, GB.36 – GB.37
answering a call.....GB.48
ARTIST.....GB.17
AUX.....GB.16 → GB.18
auxiliary source.....GB.16 → GB.18

B

BALANCE.....GB.19
BASS.....GB.19
Bluetooth connection.....GB.45
Bluetooth®.....GB.43, GB.45 – GB.46
Bluetooth® portable audio player
 pairing.....GB.17
 unpairing.....GB.17

C

call.....GB.47
call volume.....GB.12
clock.....GB.50
 display.....GB.50
confirm a destination.....GB.28 – GB.29
connect a telephone.....GB.45
contacts list.....GB.46

D

destination.....GB.24 → GB.29, GB.36 – GB.37
detailed route.....GB.30 → GB.34
detour.....GB.30 → GB.34
dialling.....GB.47
dialling a number.....GB.46

E

entering an address.....GB.24

F

FADER.....GB.19
fast winding.....GB.16
favourite number.....GB.46
FM/LW/MW bandwidths.....GB.13 → GB.15

G

GPS

 receiver.....GB.20, GB.41
 reception.....GB.20
guidance
 activation.....GB.30
 cancellation.....GB.34
 map.....GB.30 → GB.35
 voice.....GB.30 → GB.34

J

Jack socket.....GB.18

L

LIST mode.....GB.13

M

MANU mode.....GB.13
map
 digitised map.....GB.20
 display.....GB.21, GB.35
 scale.....GB.21
 settings.....GB.35, GB.38
map navigation.....GB.35
mute.....GB.12

O

operating faults.....GB.56 – GB.57
operation.....GB.9

ALPHABETICAL INDEX (2/2)

P

pairing a telephone..... GB.43
POI.....GB.25 – GB.26, GB.35
point of interest.....GB.25 – GB.26, GB.35
PRESET mode..... GB.13 → GB.15

R

range of wavelengths..... GB.13 → GB.15
RDS.....GB.4, GB.15
receiving a call..... GB.48

S

screen
 monitor..... GB.9
 navigation display..... GB.30 → GB.34
 navigation screen..... GB.30 → GB.35
 settings..... GB.35
setting..... GB.19
settings.....GB.39 → GB.41, GB.50 – GB.51
 audio..... GB.19
 balance..... GB.19
 brightness..... GB.50
 fader..... GB.19
 navigation..... GB.39 → GB.41
storing a radio station..... GB.13 → GB.15
switching off..... GB.9
system
 update..... GB.52 → GB.55

T

3D/2D mode..... GB.30
treble..... GB.19

U

unpairing a telephone..... GB.44
USB..... GB.52 → GB.55

GB.60

USB key..... GB.52 → GB.55
USB socket..... GB.17, GB.52 → GB.55

V

volume..... GB.12
volume: adapted to speed..... GB.12

W

WMA..... GB.16